

X.25-IP Converter

The standard configured ports of X.25-IP Converter Box consist of four parts: 2 Fast Ethernet ports, 1 Console port, 1AUX port, and 1double serial port. The detailed information is as the following table:

Performance table of standard configuring port :

| Port name | Feature |
|---------------|---|
| Ethernet port | rate 10/100M UTP (RJ45)interface with ACT Link 100Mbps indicator light. |
| Console port | rate 1200bps—115200bps RJ45 interface. |
| AUX port | rate 1200bps—57600bps RJ45 interface. |
| Serial port | rate 2400bps--2048000bps. |

There are 2 interface card slots, 1 power slots, 1 power switch(ON:open; OFF: close), 1 touch-ground lug and 1 bar vent(strip vent can help to create cool condition).

X.25-IP Converter Box TP0-Bridge front panel is as the following picture:


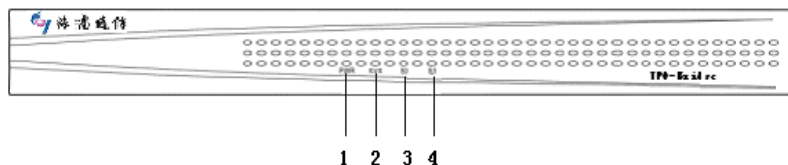


Figure -1 X.25-IP Converter Box TP0-Bridge front panel

Parts information table of the front panel of the converter.

| No. | name | description | Information |
|-----|------|--------------------------------------|---|
| 1 | PWR | power indicator light | Light ON indicates the Converter is power on |
| 2 | SYS | system indicator light | Light ON indicates the system starts successfully , |
| 3 | S0 | Standard slot0 indicator light | Light ON indicates standard slot is valid |
| 4 | S1 | interface card slot1 indicator light | Light ON indicates Slot1 has interface card |

Rear panel picture is as the following table:

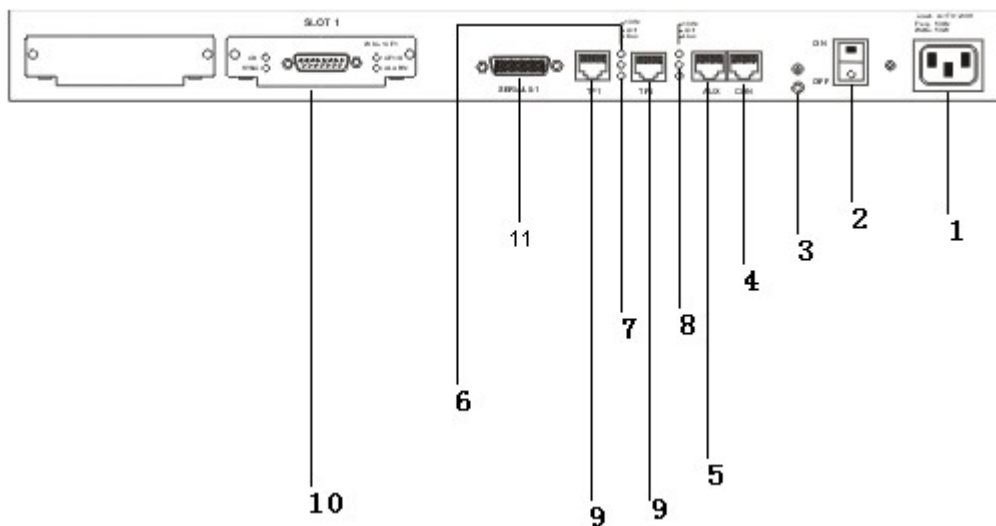

Information table of rear panel parts of the converter :

| No. | Name | Description | Information |
|-----|-------|-------------------------------|--|
| 1 | | alternating power socket | AC100 240V |
| 2 | Power | power switch | Press up is ON, down OFF. |
| 3 | | touch ground lug | Touch-ground is well |
| 4 | CON | Console port | |
| 5 | AUX | AUX port | |
| 6 | 100M | 100M Ethernet indicator light | The light is ON when 10/100M Ethernet port is running on |

ANDA Telecom Pvt. Ltd.

Registered office : E-36, Amar Colony, Lajpat Nagar-IV, New Delhi - 110024, INDIA

Phone : +91 11 41323629, +91 95 302 57175

E-mail : Info@andatelecomindia.com

URL : www.andatelecomindia.com

| | | | |
|----|-------|--|---|
| | | | 100M. |
| 7 | LINK | 10/100M Ethernet connection indicator light | The light is ON when Ethernet connects to HUB by cross-pair line successfully. |
| 8 | ACT | 10/100M accepting/sending indicator light on Ethernet port | The light is ON when Ethernet port is accepting/sending data. |
| 9 | TP | 10/100M Ethernet twist-pair port | Connect to LAN(ethernet) by twist-pair on this port |
| 10 | SLOT1 | interface card slot1 | Support 1-serial-port card, 1-Ethernet card, 2-serial-port card, 2-Ethernet card, 1-Ethernet-1-serial-port-compound card, 2-E&M/FX/FXO voice card, 8-serial-port card, 1-ISDN BRI S/Tinterface card, 1-E1C,DTU interface card, 1-ISDN U interface card, 1-MODEM card. |

Application

